



COUNCIL BLUFFS  
Makerspace


# Backyard Movie Night Kit

## Set-Up Instructions


### Setting Up the Outdoor Screen

**01.** Connect horizontal bars (long one) as illustrated below using triangle and straight connectors.


(Caution: Both end of aluminum bar is keen to be careful.)

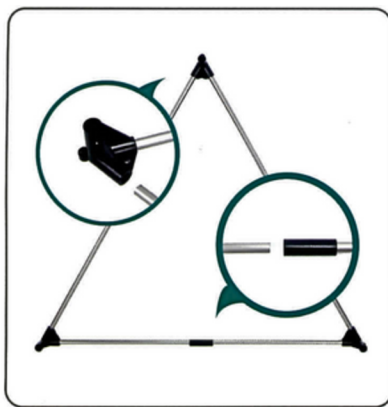


**02.** Insert one hook into a hole of one triangle connector and pull the string to insert the other hook into a hole of the other triangle connected bar. Use 3-hole tighter to tighten string. The two other strings should be connected in the same way to form a triangle of the string along the bars. A long string tied to a hook at both ends.

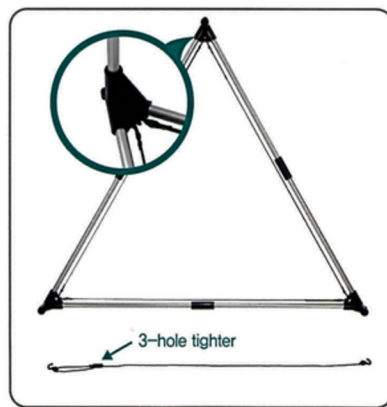

**03.** Place the completed triangle frame on the floor and set up six vertical bars at three points illustrated below.

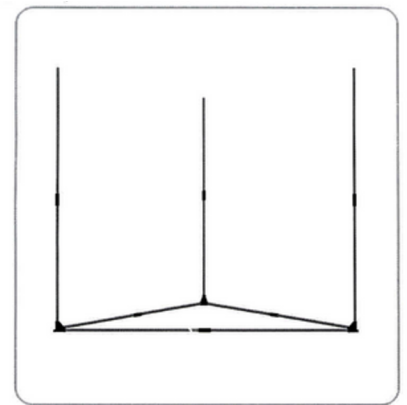


**04.** Complete another triangle frame on the three vertical bars using connectors to complete the stand as shown below.

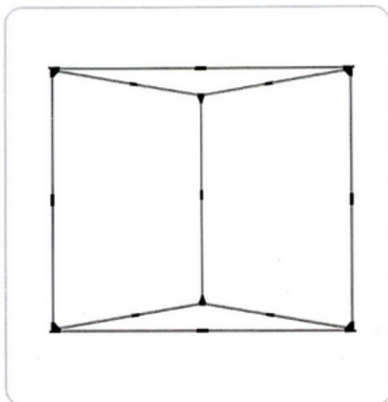

**05.** Mount the screen to the stand.


- Insert a triangle pin into a hole of the triangle connector positioned on the both ends of the stand.
- Insert the hooks into the screen eyelets as illustrated below.
- Place the Velcro-like fasteners into the holes of the screen eyelets (three on top, two on both sides) to fix the screen to the stand.

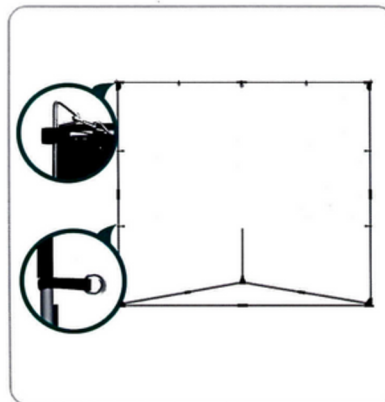

< Components of Screen Stand >

No.	Component name	No.	Component name
(1)	Triangle connector	(5)	Horizontal aluminum bar
(2)	Straight connector	(6)	Vertical aluminum bar
(3)	Triangle pin	(7)	A string tied to hook
(4)	Velcro-like fastener	(8)	Screen

Components of Screen Stand

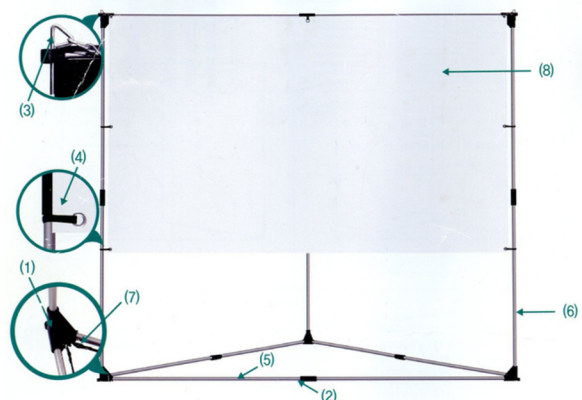



COUNCIL BLUFFS  
Makerspace

# Backyard Movie Night Kit

## Set-Up Instructions

---

### Connecting the Blu-Ray Player to the Projector.

**01.** Plug the Blu-Ray Power Cord into the DC IN port on the back of the Blu-Ray Player.



**02.** Plug the Blu-Ray Power Cord into the Surge Protector. Plug the Surge Protector into an outlet and turn on the Blu-Ray Player.



**03.** Plug the Projector Power Cord into the port on the side of the Projector. Remove the Lens Cap of the Projector.



**04.** Plug the Projector Power Cord into the Surge Protector and turn on the Projector.



**05.** Plug one end of the HDMI Cord into the HDMI OUT port on the back of the Blu-Ray Player.



**06.** Plug the other end of the HDMI Cord into the HD1 Port on the other side of the Projector.



# Backyard Movie Night Kit

## Set-Up Instructions

---

### Connecting the Soundbar to the Projector through Bluetooth.


**01.** Plug the Soundbar Power Cord into the DC IN port on the underside of the Soundbar.



**02.** Plug the Soundbar Power Cord into the Surge Protector or other outlet. Turn on the Soundbar.



**03.** Press the Input Button on the Soundbar until it says Bluetooth.

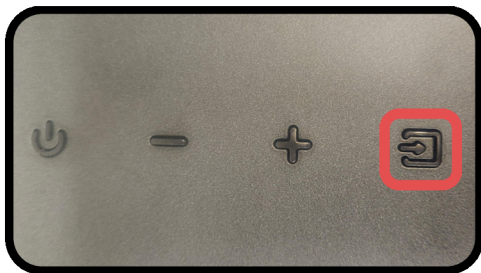

**04.** Using the Projector Remote, select Settings from the screen.



**05.** Under BLUETOOTH, select Bluetooth On.



# Backyard Movie Night Kit

## Set-Up Instructions

### Connecting the Soundbar to the Projector through Bluetooth.

**06.** Select [AV] Samsung Soundbar S5 and click OK on the Soundbar Remote to Connect.



**07.** Press the Back Button on the Soundbar Remote to return to the Menu.



**08.** Using the Projector Remote, select HDMI1 from the screen.



### Focusing and Adjusting the Projector

**01.** The Projector can be adjusted by physically changing the distance between the screen and the projector, lowering or raising the Threaded Projector Foot, and adjusting the Keystone Wheel on the Projector.

**02.** The Projector can be focused by adjusting the Focus Wheel on the Projector.

